

## Cleaning Instruction



- Close the valve\*
- Remove the plug
- Remove the filter
- Clean the filter
- Insert the filter
- Assemble the plug
- Open the valve\*

The valve can be installed in any position: horizontal, vertical, oblique.

\* valve opened: handle parallel to body

\* valve closed: handle perpendicular to body

Applies to the following articles:

**Ball valve with integrated strainer**

Article No.	Type No.
133554 to 133559	322.04 to 322.09